

Prima di iniziare l'installazione:

Le cuffie Racecap FastDry sono compatibili con ruote KTM aventi distanziali successivi al 2007, Husaberg dal 2007 a fine produzione, Husqvarna 2014 o successive. Acquistando distanziali successivi al 2007, la compatibilità con i modelli KTM e Husaberg è dal 2002 in poi. Non sono compatibili con i modelli Husqvarna precedenti al 2014. Non è possibile montare la cuffia anteriore sinistra se è installato il paradiso originale KTM/HSQ o altri paradiso aftermarket.


Il montaggio delle cuffie RaceCap FastDry richiede lo smontaggio della ruota dalla moto. Si consiglia di lavare accuratamente le ruote prima di montare le cuffie. **Attenzione:** La corretta installazione dei Racecap prevede che siano ancorati al distanziale e svincolati dal mozzo (la cuffia resta ferma mentre il mozzo gira). Le cuffie Racecap possono causare un cigolio, non è da considerare un difetto. Il kit Racecap è composto da N.2 cuffie specifiche per una ruota. Il kit per ruota anteriore comprende anche anelli adattatori per ruote 2016 o successive.. Le cuffie per ruota anteriore hanno la sigla "F" (FRONT), quelle per ruota posteriore «R» (REAR).

Il prodotto è garantito due anni come da legge per difetti di fabbricazione.

1) Smontare la ruota dalla moto

2) Pulire e sgrassare bene i distanziali. Se si tratta di ruota anteriore 2016 o successive (perno 22mm) inserire l'anello adattatore nel distanziale anteriore come mostrato in figura 1. L'anello resterà in posizione per interferenza, se necessario applicare colla cianoacrilato.

3) Inserire i Racecap nell'apposita sede come mostrato in figura 1 e 2. Per montare i Racecap FastDry non è necessario smontare i distanziali dalla ruota.

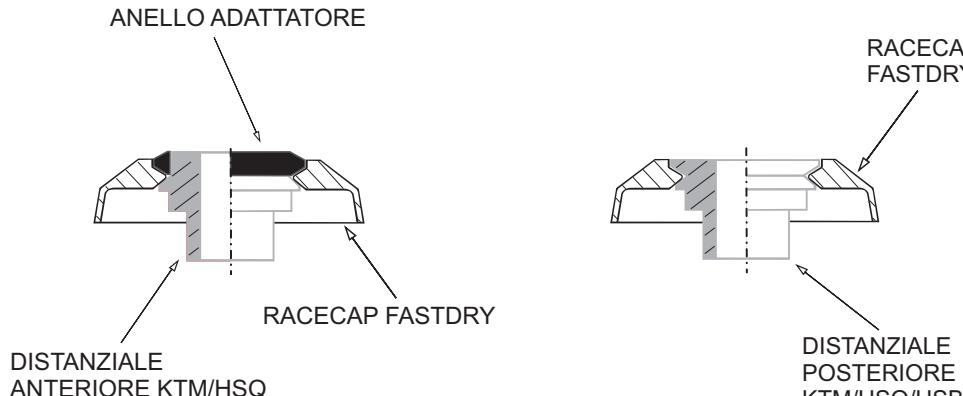

Frienduro declina ogni responsabilità relativa a danni causati da un uso improprio delle cuffie Racecap. Visita il sito www.racecap.it in caso di dubbi o contattaci via email all'indirizzo info@racecap.it

Prima di iniziare l'installazione:

Le cuffie Racecap FastDry sono compatibili con ruote KTM aventi distanziali successivi al 2007, Husaberg dal 2007 a fine produzione, Husqvarna 2014 o successive. Acquistando distanziali successivi al 2007, la compatibilità con i modelli KTM e Husaberg è dal 2002 in poi. Non sono compatibili con i modelli Husqvarna precedenti al 2014. Non è possibile montare la cuffia anteriore sinistra se è installato il paradiso originale KTM/HSQ o altri paradiso aftermarket.


Il montaggio delle cuffie RaceCap FastDry richiede lo smontaggio della ruota dalla moto. Si consiglia di lavare accuratamente le ruote prima di montare le cuffie. **Attenzione:** La corretta installazione dei Racecap prevede che siano ancorati al distanziale e svincolati dal mozzo (la cuffia resta ferma mentre il mozzo gira). Le cuffie Racecap possono causare un cigolio, non è da considerare un difetto. Il kit Racecap è composto da N.2 cuffie specifiche per una ruota. Il kit per ruota anteriore comprende anche anelli adattatori per ruote 2016 o successive.. Le cuffie per ruota anteriore hanno la sigla "F" (FRONT), quelle per ruota posteriore «R» (REAR).

Il prodotto è garantito due anni come da legge per difetti di fabbricazione.

1) Smontare la ruota dalla moto

2) Pulire e sgrassare bene i distanziali. Se si tratta di ruota anteriore 2016 o successive (perno 22mm) inserire l'anello adattatore nel distanziale anteriore come mostrato in figura 1. L'anello resterà in posizione per interferenza, se necessario applicare colla cianoacrilato.

3) Inserire i Racecap nell'apposita sede come mostrato in figura 1 e 2. Per montare i Racecap FastDry non è necessario smontare i distanziali dalla ruota.

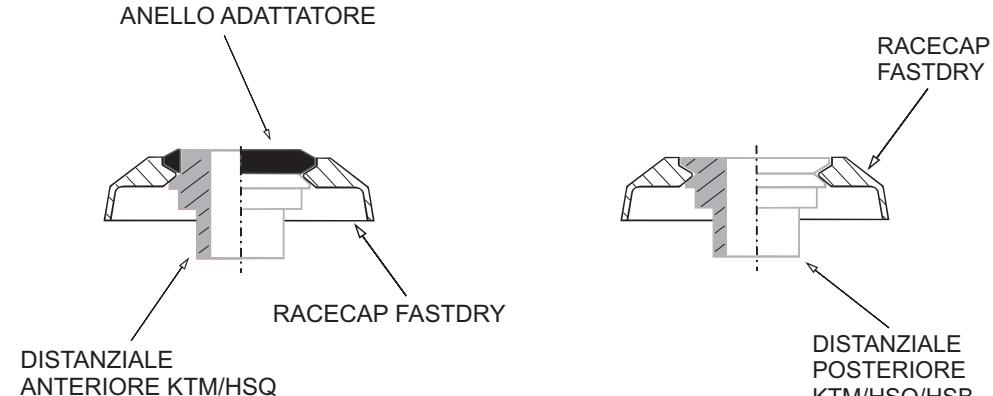

Frienduro declina ogni responsabilità relativa a danni causati da un uso improprio delle cuffie Racecap. Visita il sito www.racecap.it in caso di dubbi o contattaci via email all'indirizzo info@racecap.it

MOUNTING INSTRUCTION

Before start

Racecap FastDry are compatible with KTM wheels and spacers produced in 2007 or later; Husaberg from 2007 to the end of production, Husqvarna from 2014 on. Racecap FastDry are compatible with KTM and Husaberg wheel hub produced from 2002 on, but spacers are compatible if produced in 2007 or later. Racecap FastDry are not compatible with Husqvarna models previous to 2014. The left front Racecap cannot be installed if the original or aftermarket KTM/HSQ diskguard is mounted.

In order to mount Racecap Fastdry, wheels should be removed from the bike. It is recommended to wash the wheels carefully, before mounting protections. Warning: Proper installation of Racecap requires them to be anchored to the spacer and released from the hub (the cap remains stationary while the hub rotates). The Racecap can cause a squeak, it is not a defect. Racecap kit consists of No.2 specific protections for one wheel. Front wheel Racecap FastDry kit includes the adapters for KTM / HSQ 2016 or later. The front cap is marked with the letter F (FRONT), the rear one with the letter R (REAR).

The product is guaranteed for manufacturing defects for two years, according to the law.



1) Remove wheel from motorcycle

2) Clean and degrease spacers carefully. For front wheel 2016 or later insert the adapter ring on the spacer as shown in the picture No.1 (*). The adaptor ring will keep the right position for mechanical interference; if necessary use cyanoacrylate glue.

3) Place the Racecap in the appropriate seat as shown in the picture No.1 and 2. Removing spacers from the wheel is not necessary to mount Racecap FastDry.

(*) In models previous to 2016, Racecap FastDry for front wheel do not need any adapter ring as they exploit spacer shape. (see picture No.2)

Hint: take a ride with the bike after washing, to allow any small water deposit to exit from Racecap FastDry.

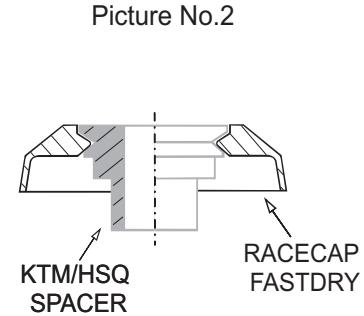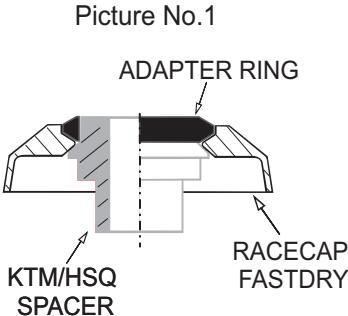

Frienduro disclaims every liability for damage caused by improper use of Racecap protections. Please visit www.racecap.it in case of doubt, or contact us by email at info@racecap.it

KTM/HSQ

MOUNTING INSTRUCTION

Before start

Racecap FastDry are compatible with KTM wheels and spacers produced in 2007 or later; Husaberg from 2007 to the end of production, Husqvarna from 2014 on. Racecap FastDry are compatible with KTM and Husaberg wheel hub produced from 2002 on, but spacers are compatible if produced in 2007 or later. Racecap FastDry are not compatible with Husqvarna models previous to 2014. The left front Racecap cannot be installed if the original or aftermarket KTM/HSQ diskguard is mounted.

In order to mount Racecap Fastdry, wheels should be removed from the bike. It is recommended to wash the wheels carefully, before mounting protections. Warning: Proper installation of Racecap requires them to be anchored to the spacer and released from the hub (the cap remains stationary

while the hub rotates). The Racecap can cause a squeak, it is not a defect. Racecap kit consists of No.2 specific protections for one wheel. Front wheel Racecap FastDry kit includes the adapters for KTM / HSQ 2016 or later. The front cap is marked with the letter F (FRONT), the rear one with the letter R (REAR).

The product is guaranteed for manufacturing defects for two years, according to the law.



1) Remove wheel from motorcycle

2) Clean and degrease spacers carefully. For front wheel 2016 or later insert the adapter ring on the spacer as shown in the picture No.1 (*). The adaptor ring will keep the right position for mechanical interference; if necessary use cyanoacrylate glue.

3) Place the Racecap in the appropriate seat as shown in the picture No.1 and 2. Removing spacers from the wheel is not necessary to mount Racecap FastDry.

(*) In models previous to 2016, Racecap FastDry for front wheel do not need any adapter ring as they exploit spacer shape. (see picture No.2)

Hint: take a ride with the bike after washing, to allow any small water deposit to exit from Racecap FastDry.

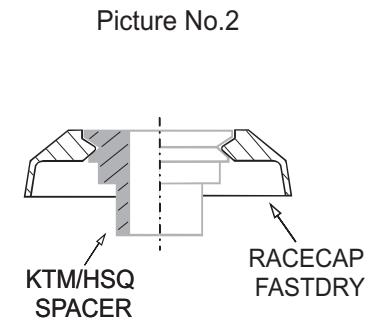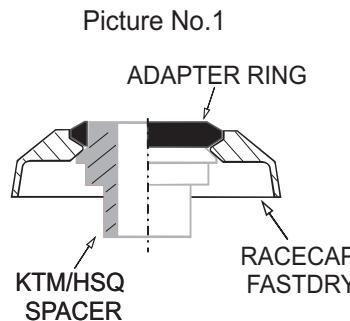

Frienduro disclaims every liability for damage caused by improper use of Racecap protections. Please visit www.racecap.it in case of doubt, or contact us by email at info@racecap.it

KTM/HSQ